

## SD-622

### Duct Smoke Detector



#### Features:

- Manual or auto reset
- Fault relay output

#### Benefit:

- Self-test feature

#### Technical Overview

The SD-622 duct smoke detector operates on the obscuration principle, using infrared technology and is designed specifically to cope with the difficult measurement conditions in air ducts, such as high velocity and levels of dirt accumulation. The relay output is either auto or manual reset relay output on detection of smoke.

## Specification:

## Part Codes:

Supply	24Vac/dc, ±20%
Power consumption	50mA max.
Relay outputs (smoke & fault)	SPST 2A @ 48V
Minimum duct size	100 x 320mm (3.94 x 12.60")
Maximum duct size	450 x 450mm* (17.72 x 17.72")*
LED indication	ON in alarm
Alarm relay (selectable)	Manual or auto reset
Housing:	
Material	ABS (flame retardant type VO)
Dimensions	116 x 106 x 52mm (4.57 x 4.17 x 2.05")
Probe:	
Dimensions	300 x 20mm dia. (11.81 x 0.79")
Material	Plastic
Protection	IP65 (housing only)
Ambient range:	
Temperature	10 to 40°C (50 to 104°F)
RH	20 to 80% non-condensing
Country of origin	Denmark

### SD-622

Duct smoke detector



The products referred to in this data sheet meet the requirements of EU Directive 2004/108/EC

\* Please see recommendations on page 3.

## How It Works:

The sensor works by using an infra-red transmitter and receiver fitted to the PCB inside of the housing. The transmitting device sends a beam, which is reflected from a mirror in the end of the 300mm long probe, and the receiving device then receives this beam when there are no obstacles, like smoke particles in the tube. If smoke is present, then this will disturb the beam, and the receiver will lose the signal and an alarm will be activated.

On power up the SD-622 will start an automatic calibration procedure, the power from the TX device will increase in small steps, just until the RX device receives enough signal to validate the "link". This is stored in the volatile memory for any further use, or until a new power on. Now any obstacles, like smoke will force an alarm.

### Recommendations

- The SD-622 has a probe length of 300mm and should NOT be used in ducts with a diameter or square size greater than 450mm, unless the smoke detection is intended as a secondary non-life safety action with areas served being covered by smoke detection connected to a fire alarm system that is able to shut-off the ventilation fans, as it will not monitor the whole of the duct.
- Units should NOT be mounted where ambient sunlight will fall on the photocell.
- Units should never be mounted at or near sharp bends in ductwork, as turbulence and side currents can carry the smoke away from the probe.
- The SD-622 is an optical beam detector and therefore, air velocity has little effect on performance. However, careful positioning of the detector is required if optimum detection is to be achieved. The detector should always be fitted with the holes in the sensing tube parallel to the airflow.
- Units should not be mounted close to supply or extract fans.
- With large installations, where several ducts collect into a common duct, consideration must be given to dilution of smoke and rate of airflow. For example, 10 small ducts may feed at different points into one large main extract duct, and if only one smoke detector is fitted in the main extract duct, the position can arise where one duct is feeding smoke and nine are feeding clean air. The amount of smoke is therefore diluted by 90%, and if this is coupled with a high flow rate, the smoke may not be detected for the minimum operating period of 1 second, resulting in no alarm being generated. It may be necessary to mount 10 detectors in each of the small ducts to guarantee correct operation.

## Changing Reset Modes:

### Manual to Auto reset

Press and hold the external reset button (see page 5 for location). After approx. 5 seconds, the internal green LED will go off for 1 second. Release the button and the device is now in auto reset mode. The PCB mounted LED will be constantly lit green.

### Auto to Manual reset

Press and hold the external reset button (see page 5 for location). After approx. 5 seconds, the internal green LED will go orange and the external LED will go red for 1 second. Release the button and the device is now in manual reset mode. The PCB mounted LED will be constantly lit green.

## Calibration & Alarm Condition:

While the detector is auto-calibrating, the internal LED will flash red 6 times a second. When calibration is finished, the LED will change to orange for a few seconds, the calibration is being stored in the volatile memory.

The PCB LED will then be continuously lit green, this also indicates that the sensor is powered correctly and not in alarm.

If the detector is in alarm or a fault has occurred, the internal & external LED's will change to red.

Under normal operating conditions the relay is energised. Therefore, if any fault develops the relay will de-energise shutting off the equipment connected to the relay, i.e burner or circulating fan, rendering the installation safe.

Relay status

- Un-powered      Open
- Powered        Closed
- Alarm            Open


## Installation:

1. The SD-622 should only be installed by a competent, suitably trained technician, experienced in installation with hazardous voltages. (>50Vac & <1000Vac or >75Vdc & 1500Vdc)
2. Ensure that all power is disconnected before carrying out any work on the SD-622.
3. If the sensor is mounted outside, it is recommended that the unit be mounted with the cable entry at the bottom. If the cable is fed from above then into the cable gland at the bottom, it is recommended that a rain loop be placed in the cable before entry into the sensor.
4. Drill a 22mm (0.87") diameter hole, make sure to align the holes in the probe so that they point into the air flow, not at right angles to it. Drill two holes at 85mm (3.35") centres and fix the IP65 housing to the duct with appropriate screws.
5. Remove the front cover by twisting the lid and separating from the main body.
6. Feed the cable through the waterproof gland and terminate the cores at the terminal block. Leaving some slack inside the unit, tighten the cable gland onto the cable to ensure water tightness.
7. Maximum cable is 2.5mm<sup>2</sup>, care must be taken not to over tighten terminals.
8. Ensure the supply voltage is within the specified tolerances.
9. Replace the lid tightly.

## Connections:

- |                           |                       |
|---------------------------|-----------------------|
| 1. Fault Output           | Common                |
| 2. Fault Output           | Normally Closed*      |
| 3. Smoke Detection Output | Common                |
| 4. Smoke Detection Output | Normally Closed*      |
| 5. Supply                 | +24Vac/dc, $\pm 20\%$ |
| 6. Supply                 | 0V                    |

\* See alarm conditions on page 4

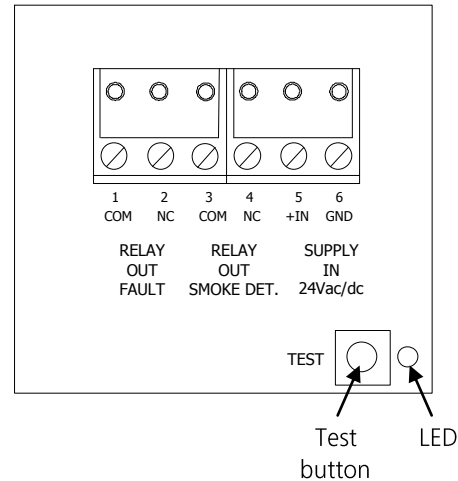

## Self-Test, Failure Mode & Manual Reset:

- The output of the SD-622 can be manually overridden, to check integrity of the field wiring. To operate press the PCB mounted button. In self-test mode both relay outputs will open, the external and the internal LED will be red. To operate press the PCB mounted button.
- The external LED will flash red if the detector fails.

Whilst every effort has been made to ensure the accuracy of this specification, Sontay cannot accept responsibility for damage, injury, loss or expense from errors or omissions. In the interest of technical improvement, this specification may be altered without notice.

Tel: +44 (0)1732 861200. - E-mail: sales@sontay.com. - Web: www.sontay.com.

© 2012 Sontay Limited. All rights reserved